


## MAINTENANCE MANUAL OF TIMBER WINDOWS

Timber windows should be cleaned at least twice per year to ensure representative look of a window and resistance to changing weather conditions. Although it can be done with a simple moist cloth, we recommend using special cleaning products, which are meant to protect the painted surface.

A paint manufacturer Gori has worked out a maintenance wax, which is now available.

Clean the surfaces of a window with a soap solution or a furniture cleaning product. Dry the surface with a clean cloth. After this, treat the surface with a maintenance wax (GORI 901), which is a water-soluble maintenance product. Wax protects against moisture and provides protection to glazed and painted surfaces that have been damaged by weather conditions. For more substantial protection treat the surface with the wax 3-4 times per year. Apply the product on the surface with a soft cloth along the fibres and leave on for some time. Shake well before use!

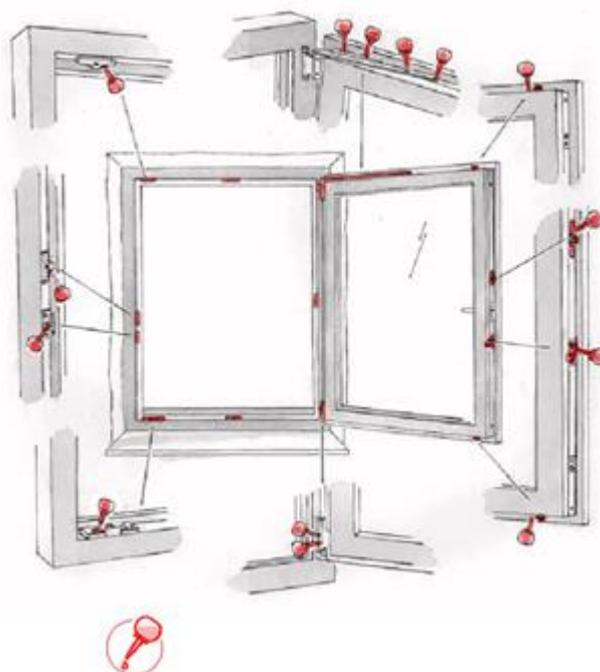

Window hardware has an important role in ensuring comfortable use of a window. To guarantee long and comfortable use of windows, window hardware must be greased in the points marked with arrows on the drawing below at least once per year.

This can be done with grease or oil (DIN 51825-K 2 K-30) that is free from acid or resin. Alternatively, conventional oil for appliances may be used.

To keep gaskets elastic, grease gaskets twice per year with silicone oil or a special "Gasket stick".

To ensure safety and long service-life of a window, please be sure to observe the following requirements.



**DANGER!**

**Danger of injury from falling through open windows and balcony doors.**

- Behave with care when in the vicinity of open windows and balcony doors.
- Keep children and people who are unable to properly assess the danger involved away from the point of danger.



**WARNING!**

**Danger of injury from trapping body parts in the opening gap between sash and frame.**

- When closing windows and balcony doors, never reach between sash and frame, and always act with care.
- Keep children and people who are unable to properly assess the danger involved away from the point of danger.



**WARNING!**

**Danger of injury and risk of property damage from applying additional force to the sash**

- Do not apply additional force to the sash.



**CAUTION!**

**Danger of injury from the effects of windy weather**

- Prevent windy weather from acting on the open sash.
- If the weather outside is windy or there is a draft, close and lock the windows and balcony door sashes.



**CAUTION!**

**Danger of injury and risk of property damage caused by placing objects into the gap between the sash and frame**

- Do not place objects into the gap between the sash and the frame.



**CAUTION!**

**Risk of injury and property damage caused by pressing the sash against the opening edge (wall reveal)**

- Do not press the sash against the opening edge (wall reveal)